


Urgent Notification Regarding Use of Pre-Lace Hoisting Grip

Date: 27 January 2023
Location: HUBER+SUHNER AG; Herisau; Switzerland
Department: COM FO Technology and Operations Product Management
Contact: Sebastian Hofmann
Addressees: all customers
Page: 1 of 5

Urgent Notice regarding product variant Masterline Classic Hybrid 12x24 / Masterline Classic Power 12

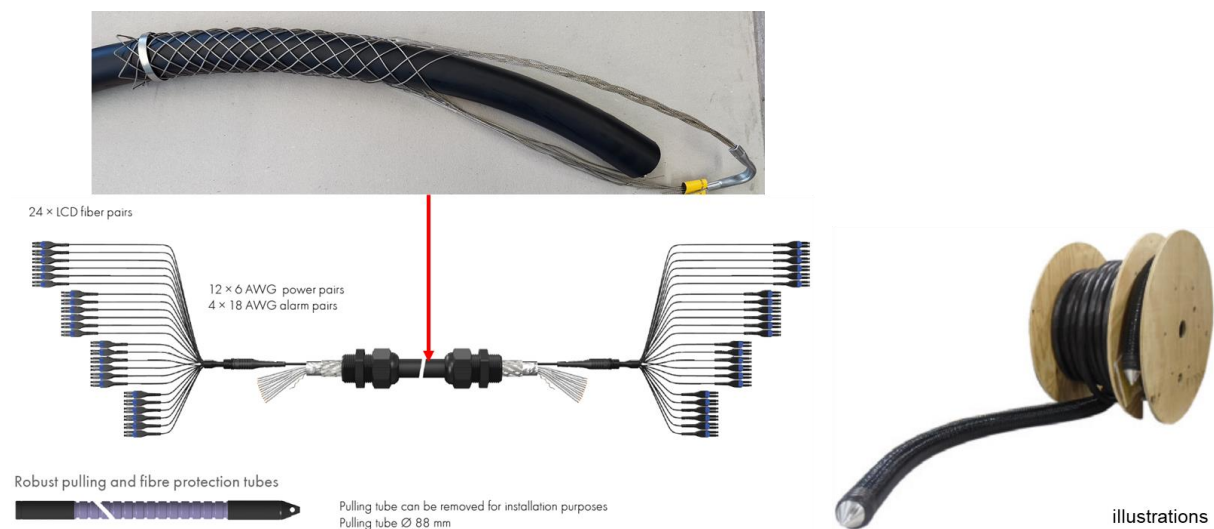

This Urgent Notice applies to all Masterline Classic Hybrid 12x24 items in the list appended to this notice. This Urgent Notice supersedes all prior instructions, guidelines and/or notifications regarding these products. We were recently notified that our supplier ceased distribution and sale of the Pre-Lace Hoisting Grip used in the installation of Masterline Classic Hybrid 12x24 products following to suppliers ongoing investigations in connection with an incident. This action from our supplier necessitates the following requirements and warnings from HUBER+SUHNER:

1. For Hybrid Cable Assemblies/Products That Were Delivered to Installers:

The use of any kind (e.g., to pull up, affix the hybrid assembly to a structure, and/or to support the weight of the cable in any manner) of the pre-equipped/affixed Pre-Lace Hoisting Grip is **immediately prohibited**. HUBER+SUHNER now requires that installation of the hybrid cables be performed via alternate means.

2. For Hybrid Cable Assemblies/Products in Stock at Customer Facilities or Warehouses:

The use of any kind (e.g., to pull up, affix the hybrid assembly to a structure, and/or to support the weight of the cable in any manner) of the pre-equipped/affixed Pre-Lace Hoisting Grip is **immediately prohibited**. For any products in stock that come assembled or equipped with a Pre-Lace Hoisting Grip, the Pre-Lace Hoisting Grip should be rendered unusable per the attached instruction. HUBER+SUHNER now requires that installation of the hybrid cables be performed via alternate means.

3. **Hybrid Cable Assemblies/Products To Be Delivered by HUBER+SUHNER after 26 January 2023:**

All referenced products sold or delivered by HUBER+SUHNER after 26 January 2023 will be delivered without a pre-installed Pre-Lace Hoisting Grip. HUBER+SUHNER now requires that installation of these hybrid cables be performed via alternate means.

Please note that current online documentation concerning the installation of Hybrid Cables using a Pre-Lace Hoisting Grips (installation instructions, data sheets and assembly drawings) are not yet updated. This Urgent Notice expressly supersedes all prior and current HUBER+SUHNER product install documentation. HUBER+SUHNER has other Lace-up Hoisting Grips products available for use with its Hybrid Cables. Please contact HUBER+SUHNER concerning these products.

Please do not hesitate to contact us regarding this Urgent notice, product installation, alternate Lace-up Hoisting Grips or any other questions.



Sebastian Hofmann
Head of Product Management Fiber Connectivity HY/PO & CO & EQ
Phone: +41 71 353 4139
sebastian.hofmann@hubersuhner.com

List of affected articles:

H+S No.:	Description
85101349	MLCHCO-0-06C-008U-008U-060ftSS
85101350	MLCHCO-0-06C-008U-008U-090ftSS
85101351	MLCHCO-0-06C-008U-008U-120ftSS
85101352	MLCHCO-0-06C-008U-008U-150ftSS
85101353	MLCHCO-0-06C-008U-008U-210ftSS
85101354	MLCHCO-0-06C-008U-008U-240ftSS
85101355	MLCHCO-0-06C-008U-008U-270ftSS
85101356	MLCHCO-0-06C-008U-008U-300ftSS
85101357	MLCHCO-0-06C-008U-008U-330ftSS
85101358	MLCHCO-0-06C-008U-008U-360ftSS
85101359	MLCHCO-0-06C-008U-008U-390ftSS
85101360	MLCHCO-0-06C-008U-008U-420ftSS
85101361	MLCHCO-0-06C-008U-008U-450ftSS
85101362	MLCHCO-0-06C-008U-008U-480ftSS
85101363	MLCHCO-0-06C-008U-008U-510ftSS
85101473	MLCHCO-0-06C-008U-008U-030ftSS
85101474	MLCHCO-0-06C-008U-008U-040ftSS
85101475	MLCHCO-0-06C-008U-008U-050ftSS
85101476	MLCHCO-0-06C-008U-008U-070ftSS
85101477	MLCHCO-0-06C-008U-008U-080ftSS
85101478	MLCHCO-0-06C-008U-008U-100ftSS
85101479	MLCHCO-0-06C-008U-008U-110ftSS
85101480	MLCHCO-0-06C-008U-008U-130ftSS
85101481	MLCHCO-0-06C-008U-008U-140ftSS
85101482	MLCHCO-0-06C-008U-008U-160ftSS
85101483	MLCHCO-0-06C-008U-008U-170ftSS
85101484	MLCHCO-0-06C-008U-008U-190ftSS
85101485	MLCHCO-0-06C-008U-008U-200ftSS
85101486	MLCHCO-0-06C-008U-008U-220ftSS
85101487	MLCHCO-0-06C-008U-008U-230ftSS
85101488	MLCHCO-0-06C-008U-008U-250ftSS
85101489	MLCHCO-0-06C-008U-008U-260ftSS
85101490	MLCHCO-0-06C-008U-008U-280ftSS
85101491	MLCHCO-0-06C-008U-008U-290ftSS
85101492	MLCHCO-0-06C-008U-008U-310ftSS
85101493	MLCHCO-0-06C-008U-008U-320ftSS
85101494	MLCHCO-0-06C-008U-008U-340ftSS
85101495	MLCHCO-0-06C-008U-008U-350ftSS
85101496	MLCHCO-0-06C-008U-008U-370ftSS
85101497	MLCHCO-0-06C-008U-008U-380ftSS
85101498	MLCHCO-0-06C-008U-008U-400ftSS
85101499	MLCHCO-0-06C-008U-008U-410ftSS
85101500	MLCHCO-0-06C-008U-008U-430ftSS
85101501	MLCHCO-0-06C-008U-008U-440ftSS
85101502	MLCHCO-0-06C-008U-008U-460ftSS
85101503	MLCHCO-0-06C-008U-008U-470ftSS
85101504	MLCHCO-0-06C-008U-008U-490ftSS
85101505	MLCHCO-0-06C-008U-008U-500ftSS
85101621	MLCHCO-0-06C-008U-008U-520ftSS
85101622	MLCHCO-0-06C-008U-008U-530ftSS

85101623	MLCHCO-0-06C-008U-008U-540ftSS
85101624	MLCHCO-0-06C-008U-008U-550ftSS
85101625	MLCHCO-0-06C-008U-008U-560ftSS
85101626	MLCHCO-0-06C-008U-008U-570ftSS
85101627	MLCHCO-0-06C-008U-008U-580ftSS
85101628	MLCHCO-0-06C-008U-008U-590ftSS
85101629	MLCHCO-0-06C-008U-008U-600ftSS
85101630	MLCHCO-0-06C-008U-008U-610ftSS
85114912	MLCHCO-0-06C-008U-008U-015ftSS
85117293	MLCHCO-0-06C-008U-008U-620ftSS
85134553	MLCHCO-0-06C-008U-008U-660ftSS
85120831	MLCP-120-06A-x-00xx-00xx-40ft
85120387	MLCP-120-06A-x-00xx-00xx-25ft
85120830	MLCP-120-06A-x-00xx-00xx-30ft
85098413	MLCHCO-0-06C-008U-008U-180ftSS
85170455	MLCHCO-0-06C-008U-008U-750ftSS
85173668	MLCHCO-0-06C-008U-008U-910ftSS
85184806	MLCHCO-0-06C-008U-008U-030ftSSx
85184807	MLCHCO-0-06C-008U-008U-040ftSSx
85184808	MLCHCO-0-06C-008U-008U-050ftSSx
85184809	MLCHCO-0-06C-008U-008U-060ftSSx
85184810	MLCHCO-0-06C-008U-008U-070ftSSx
85184811	MLCHCO-0-06C-008U-008U-080ftSSx
85184812	MLCHCO-0-06C-008U-008U-090ftSSx
85184813	MLCHCO-0-06C-008U-008U-100ftSSx
85184814	MLCHCO-0-06C-008U-008U-110ftSSx
85184815	MLCHCO-0-06C-008U-008U-120ftSSx
85184816	MLCHCO-0-06C-008U-008U-130ftSSx
85184817	MLCHCO-0-06C-008U-008U-140ftSSx
85184818	MLCHCO-0-06C-008U-008U-150ftSSx
85184819	MLCHCO-0-06C-008U-008U-160ftSSx
85184820	MLCHCO-0-06C-008U-008U-170ftSSx
85184821	MLCHCO-0-06C-008U-008U-180ftSSx
85184822	MLCHCO-0-06C-008U-008U-190ftSSx
85184951	MLCHCO-0-06C-008U-008U-200ftSSx
85184952	MLCHCO-0-06C-008U-008U-210ftSSx
85184953	MLCHCO-0-06C-008U-008U-220ftSSx
85184954	MLCHCO-0-06C-008U-008U-230ftSSx
85184955	MLCHCO-0-06C-008U-008U-240ftSSx
85184956	MLCHCO-0-06C-008U-008U-250ftSSx
85184957	MLCHCO-0-06C-008U-008U-260ftSSx
85184958	MLCHCO-0-06C-008U-008U-270ftSSx
85184959	MLCHCO-0-06C-008U-008U-280ftSSx
85184960	MLCHCO-0-06C-008U-008U-290ftSSx
85184961	MLCHCO-0-06C-008U-008U-300ftSSx
85184962	MLCHCO-0-06C-008U-008U-310ftSSx
85184963	MLCHCO-0-06C-008U-008U-320ftSSx
85184964	MLCHCO-0-06C-008U-008U-330ftSSx
85184965	MLCHCO-0-06C-008U-008U-340ftSSx
85184966	MLCHCO-0-06C-008U-008U-350ftSSx
85184967	MLCHCO-0-06C-008U-008U-360ftSSx
85184968	MLCHCO-0-06C-008U-008U-370ftSSx
85184969	MLCHCO-0-06C-008U-008U-380ftSSx

85184970	MLCHCO-0-06C-008U-008U-390ftSSx
85184971	MLCHCO-0-06C-008U-008U-400ftSSx
85184972	MLCHCO-0-06C-008U-008U-410ftSSx
85184974	MLCHCO-0-06C-008U-008U-420ftSSx
85184975	MLCHCO-0-06C-008U-008U-430ftSSx
85184976	MLCHCO-0-06C-008U-008U-440ftSSx
85184977	MLCHCO-0-06C-008U-008U-450ftSSx
85184978	MLCHCO-0-06C-008U-008U-460ftSSx
85184979	MLCHCO-0-06C-008U-008U-470ftSSx
85184980	MLCHCO-0-06C-008U-008U-480ftSSx
85184981	MLCHCO-0-06C-008U-008U-490ftSSx
85184982	MLCHCO-0-06C-008U-008U-500ftSSx
85184983	MLCHCO-0-06C-008U-008U-510ftSSx
85184984	MLCHCO-0-06C-008U-008U-520ftSSx
85184985	MLCHCO-0-06C-008U-008U-530ftSSx
85184986	MLCHCO-0-06C-008U-008U-540ftSSx
85184987	MLCHCO-0-06C-008U-008U-550ftSSx
85184988	MLCHCO-0-06C-008U-008U-560ftSSx
85184989	MLCHCO-0-06C-008U-008U-570ftSSx
85184990	MLCHCO-0-06C-008U-008U-580ftSSx
85184991	MLCHCO-0-06C-008U-008U-590ftSSx
85184992	MLCHCO-0-06C-008U-008U-600ftSSx
85184993	MLCHCO-0-06C-008U-008U-610ftSSx
85194923	MLCHCO-0-06C-008U-008U-700ftSSx

Please contact us if you would like a match between our part numbers and yours.

Working Instruction

Document ID:
Index:
Page:

Not managed
Not managed
1 of 5

Part No.	Description:
See list in the appendix	Product variants Masterline Classic Hybrid 12x24 and Masterline Classic Power 12

Process Overview

These instructions only describe the procedure for making the Pre-Lace Hoisting Grip (Item 85099450) unusable for product variants Masterline Classic Hybrid 12x24 and Masterline Classic Power 12. The intended use of this instruction is only for already delivered products.

24 x LCD fiber pairs

12 x 6 AWG power pairs
4 x 18 AWG alarm pairs

Robust pulling and fibre protection tubes

Pulling tube can be removed for installation purposes
Pulling tube \varnothing 88 mm

illustrations

Tools / Equipment



wire rope cutter for at least rope diameter >1.5mm
(examples: FELCO C7; KNIPEX 95 62 160)



single-sided adhesive tape for outdoor application
(examples: Scotch Super 88)

Process Description

1.



Figure 1: Visualization





Protective equipment such as gloves, safety goggles, helmets and safety clothing must be used and worn according the local occupational health and safety regulations.

The assembly must be carefully unpacked and the portion of the cable where the Pre-Lace Hoisting Grip is attached to the cable must be made accessible.

The stickers and labels are reused in the final packaging, so they must be kept undamaged until step 4.

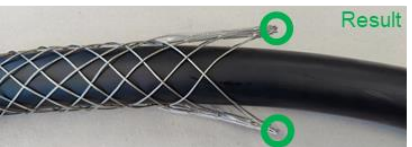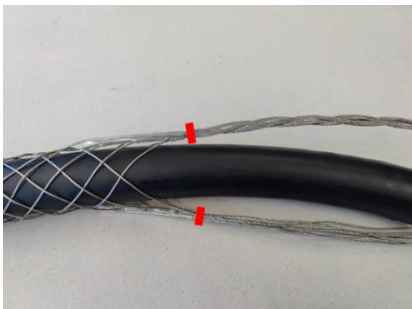


2.



Cut off the pull loop beyond the mesh (both sides) with a wire rope cutter at the indicated locations above the plastic protection.

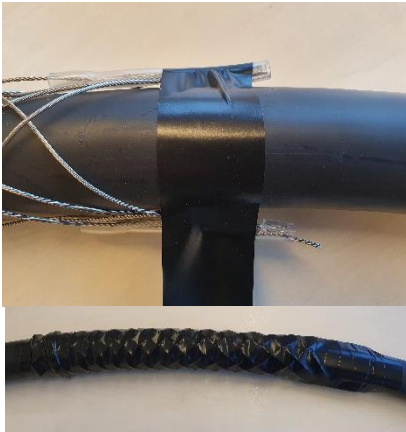

Attention: The cable jacket must not be damaged in any way.

3.		<p>Wrap and completely cover the rest of the Pre-Lace Hoisting Grip with the tape.</p>  <p>No wires of the Pre-Lace Hoisting Grip should protrude, as they could snag or injure people during installation. The wrapping tape should form a smooth surface.</p>
4.		<p>Upon completion of the above steps, the entire assembly (incl. wooden spool) should be covered with plastic wrap.</p>

Appendix:

Part list:

H+S No.:	Description
85101349	MLCHCO-0-06C-008U-008U-060ftSS
85101350	MLCHCO-0-06C-008U-008U-090ftSS
85101351	MLCHCO-0-06C-008U-008U-120ftSS
85101352	MLCHCO-0-06C-008U-008U-150ftSS
85101353	MLCHCO-0-06C-008U-008U-210ftSS
85101354	MLCHCO-0-06C-008U-008U-240ftSS
85101355	MLCHCO-0-06C-008U-008U-270ftSS
85101356	MLCHCO-0-06C-008U-008U-300ftSS
85101357	MLCHCO-0-06C-008U-008U-330ftSS
85101358	MLCHCO-0-06C-008U-008U-360ftSS
85101359	MLCHCO-0-06C-008U-008U-390ftSS
85101360	MLCHCO-0-06C-008U-008U-420ftSS
85101361	MLCHCO-0-06C-008U-008U-450ftSS
85101362	MLCHCO-0-06C-008U-008U-480ftSS
85101363	MLCHCO-0-06C-008U-008U-510ftSS
85101473	MLCHCO-0-06C-008U-008U-030ftSS
85101474	MLCHCO-0-06C-008U-008U-040ftSS
85101475	MLCHCO-0-06C-008U-008U-050ftSS
85101476	MLCHCO-0-06C-008U-008U-070ftSS
85101477	MLCHCO-0-06C-008U-008U-080ftSS
85101478	MLCHCO-0-06C-008U-008U-100ftSS
85101479	MLCHCO-0-06C-008U-008U-110ftSS
85101480	MLCHCO-0-06C-008U-008U-130ftSS
85101481	MLCHCO-0-06C-008U-008U-140ftSS
85101482	MLCHCO-0-06C-008U-008U-160ftSS
85101483	MLCHCO-0-06C-008U-008U-170ftSS
85101484	MLCHCO-0-06C-008U-008U-190ftSS
85101485	MLCHCO-0-06C-008U-008U-200ftSS
85101486	MLCHCO-0-06C-008U-008U-220ftSS
85101487	MLCHCO-0-06C-008U-008U-230ftSS
85101488	MLCHCO-0-06C-008U-008U-250ftSS
85101489	MLCHCO-0-06C-008U-008U-260ftSS
85101490	MLCHCO-0-06C-008U-008U-280ftSS
85101491	MLCHCO-0-06C-008U-008U-290ftSS
85101492	MLCHCO-0-06C-008U-008U-310ftSS
85101493	MLCHCO-0-06C-008U-008U-320ftSS
85101494	MLCHCO-0-06C-008U-008U-340ftSS
85101495	MLCHCO-0-06C-008U-008U-350ftSS
85101496	MLCHCO-0-06C-008U-008U-370ftSS
85101497	MLCHCO-0-06C-008U-008U-380ftSS
85101498	MLCHCO-0-06C-008U-008U-400ftSS
85101499	MLCHCO-0-06C-008U-008U-410ftSS
85101500	MLCHCO-0-06C-008U-008U-430ftSS
85101501	MLCHCO-0-06C-008U-008U-440ftSS
85101502	MLCHCO-0-06C-008U-008U-460ftSS
85101503	MLCHCO-0-06C-008U-008U-470ftSS
85101504	MLCHCO-0-06C-008U-008U-490ftSS
85101505	MLCHCO-0-06C-008U-008U-500ftSS

85101621	MLCHCO-0-06C-008U-008U-520ftSS
85101622	MLCHCO-0-06C-008U-008U-530ftSS
85101623	MLCHCO-0-06C-008U-008U-540ftSS
85101624	MLCHCO-0-06C-008U-008U-550ftSS
85101625	MLCHCO-0-06C-008U-008U-560ftSS
85101626	MLCHCO-0-06C-008U-008U-570ftSS
85101627	MLCHCO-0-06C-008U-008U-580ftSS
85101628	MLCHCO-0-06C-008U-008U-590ftSS
85101629	MLCHCO-0-06C-008U-008U-600ftSS
85101630	MLCHCO-0-06C-008U-008U-610ftSS
85114912	MLCHCO-0-06C-008U-008U-015ftSS
85117293	MLCHCO-0-06C-008U-008U-620ftSS
85134553	MLCHCO-0-06C-008U-008U-660ftSS
85120831	MLCP-120-06A-x-00xx-00xx-40ft
85120387	MLCP-120-06A-x-00xx-00xx-25ft
85120830	MLCP-120-06A-x-00xx-00xx-30ft
85098413	MLCHCO-0-06C-008U-008U-180ftSS
85170455	MLCHCO-0-06C-008U-008U-750ftSS
85173668	MLCHCO-0-06C-008U-008U-910ftSS
85184806	MLCHCO-0-06C-008U-008U-030ftSSx
85184807	MLCHCO-0-06C-008U-008U-040ftSSx
85184808	MLCHCO-0-06C-008U-008U-050ftSSx
85184809	MLCHCO-0-06C-008U-008U-060ftSSx
85184810	MLCHCO-0-06C-008U-008U-070ftSSx
85184811	MLCHCO-0-06C-008U-008U-080ftSSx
85184812	MLCHCO-0-06C-008U-008U-090ftSSx
85184813	MLCHCO-0-06C-008U-008U-100ftSSx
85184814	MLCHCO-0-06C-008U-008U-110ftSSx
85184815	MLCHCO-0-06C-008U-008U-120ftSSx
85184816	MLCHCO-0-06C-008U-008U-130ftSSx
85184817	MLCHCO-0-06C-008U-008U-140ftSSx
85184818	MLCHCO-0-06C-008U-008U-150ftSSx
85184819	MLCHCO-0-06C-008U-008U-160ftSSx
85184820	MLCHCO-0-06C-008U-008U-170ftSSx
85184821	MLCHCO-0-06C-008U-008U-180ftSSx
85184822	MLCHCO-0-06C-008U-008U-190ftSSx
85184951	MLCHCO-0-06C-008U-008U-200ftSSx
85184952	MLCHCO-0-06C-008U-008U-210ftSSx
85184953	MLCHCO-0-06C-008U-008U-220ftSSx
85184954	MLCHCO-0-06C-008U-008U-230ftSSx
85184955	MLCHCO-0-06C-008U-008U-240ftSSx
85184956	MLCHCO-0-06C-008U-008U-250ftSSx
85184957	MLCHCO-0-06C-008U-008U-260ftSSx
85184958	MLCHCO-0-06C-008U-008U-270ftSSx
85184959	MLCHCO-0-06C-008U-008U-280ftSSx
85184960	MLCHCO-0-06C-008U-008U-290ftSSx
85184961	MLCHCO-0-06C-008U-008U-300ftSSx
85184962	MLCHCO-0-06C-008U-008U-310ftSSx
85184963	MLCHCO-0-06C-008U-008U-320ftSSx

85184964	MLCHCO-0-06C-008U-008U-330ftSSx
85184965	MLCHCO-0-06C-008U-008U-340ftSSx
85184966	MLCHCO-0-06C-008U-008U-350ftSSx
85184967	MLCHCO-0-06C-008U-008U-360ftSSx
85184968	MLCHCO-0-06C-008U-008U-370ftSSx
85184969	MLCHCO-0-06C-008U-008U-380ftSSx
85184970	MLCHCO-0-06C-008U-008U-390ftSSx
85184971	MLCHCO-0-06C-008U-008U-400ftSSx
85184972	MLCHCO-0-06C-008U-008U-410ftSSx
85184974	MLCHCO-0-06C-008U-008U-420ftSSx
85184975	MLCHCO-0-06C-008U-008U-430ftSSx
85184976	MLCHCO-0-06C-008U-008U-440ftSSx
85184977	MLCHCO-0-06C-008U-008U-450ftSSx
85184978	MLCHCO-0-06C-008U-008U-460ftSSx
85184979	MLCHCO-0-06C-008U-008U-470ftSSx

85184980	MLCHCO-0-06C-008U-008U-480ftSSx
85184981	MLCHCO-0-06C-008U-008U-490ftSSx
85184982	MLCHCO-0-06C-008U-008U-500ftSSx
85184983	MLCHCO-0-06C-008U-008U-510ftSSx
85184984	MLCHCO-0-06C-008U-008U-520ftSSx
85184985	MLCHCO-0-06C-008U-008U-530ftSSx
85184986	MLCHCO-0-06C-008U-008U-540ftSSx
85184987	MLCHCO-0-06C-008U-008U-550ftSSx
85184988	MLCHCO-0-06C-008U-008U-560ftSSx
85184989	MLCHCO-0-06C-008U-008U-570ftSSx
85184990	MLCHCO-0-06C-008U-008U-580ftSSx
85184991	MLCHCO-0-06C-008U-008U-590ftSSx
85184992	MLCHCO-0-06C-008U-008U-600ftSSx
85184993	MLCHCO-0-06C-008U-008U-610ftSSx
85194923	MLCHCO-0-06C-008U-008U-700ftSSx